



1

Put the frame together

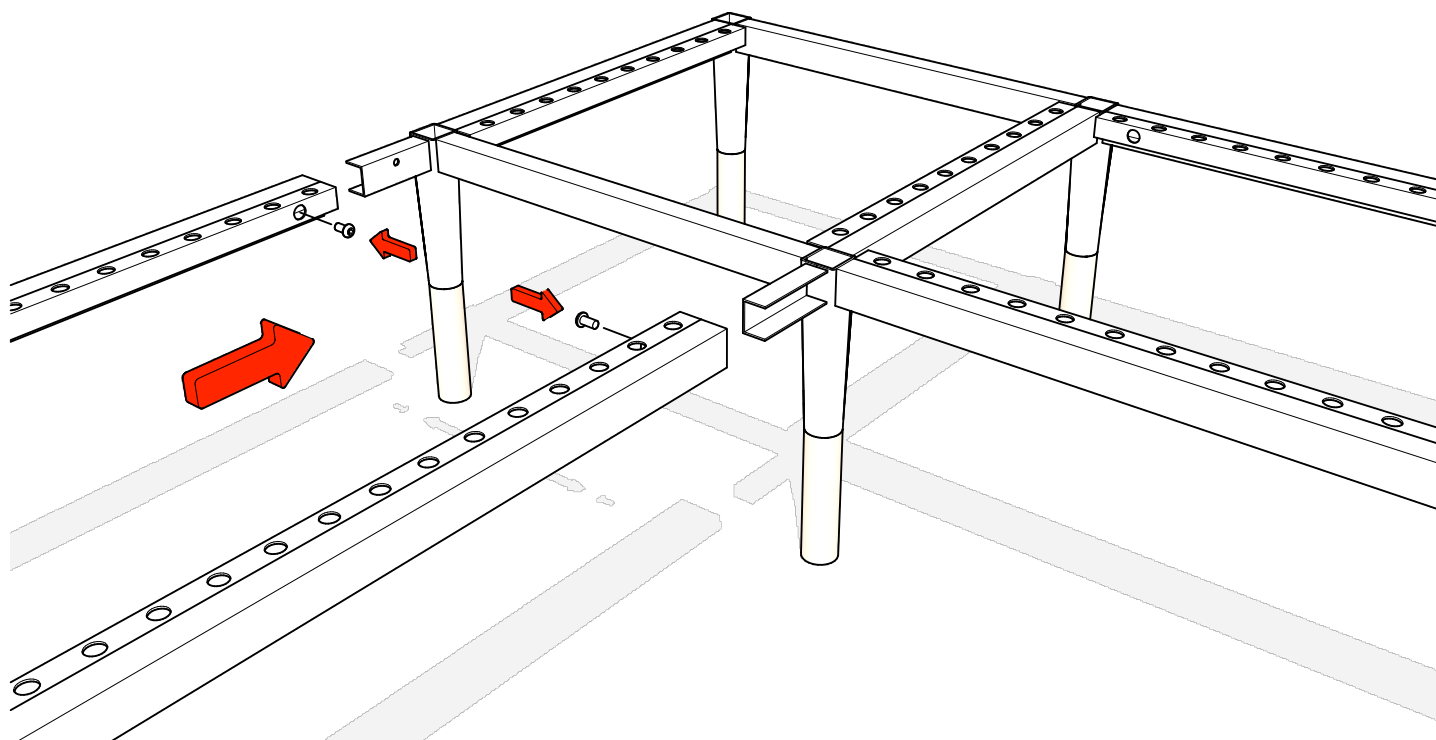


M8 x 12 mm

**JOHANSON**

2

The seat element to start with is marked "S"

Start building from right

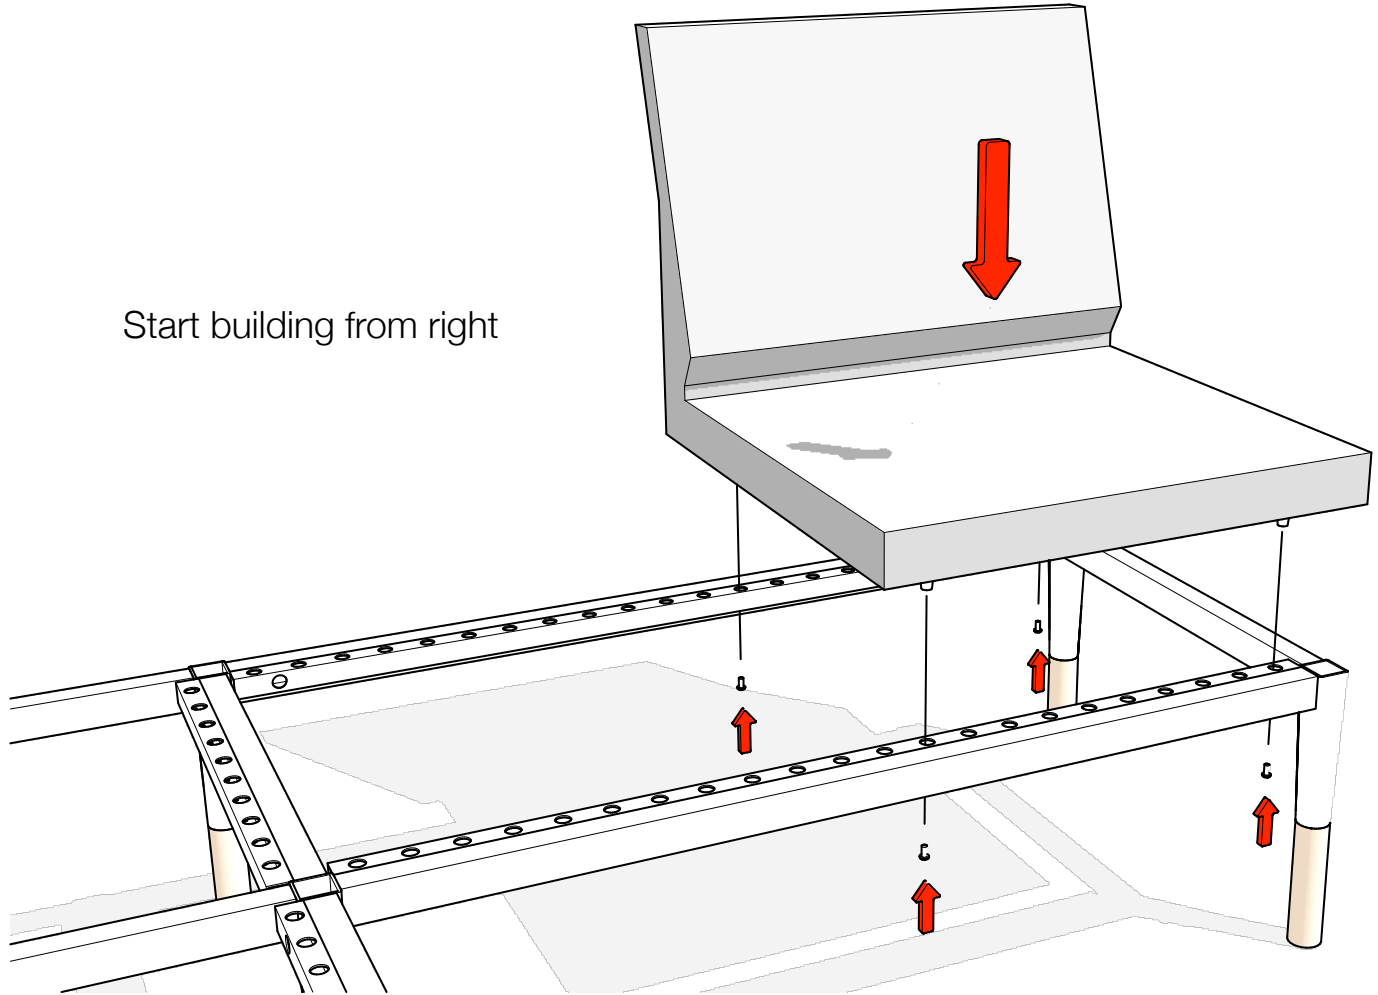


Lock each element with four screws




M6 x 12 mm

# 3


Fix hook in seat elementt

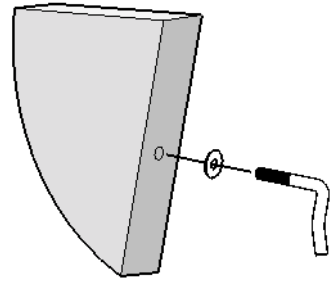


Hook the element into the fixed element

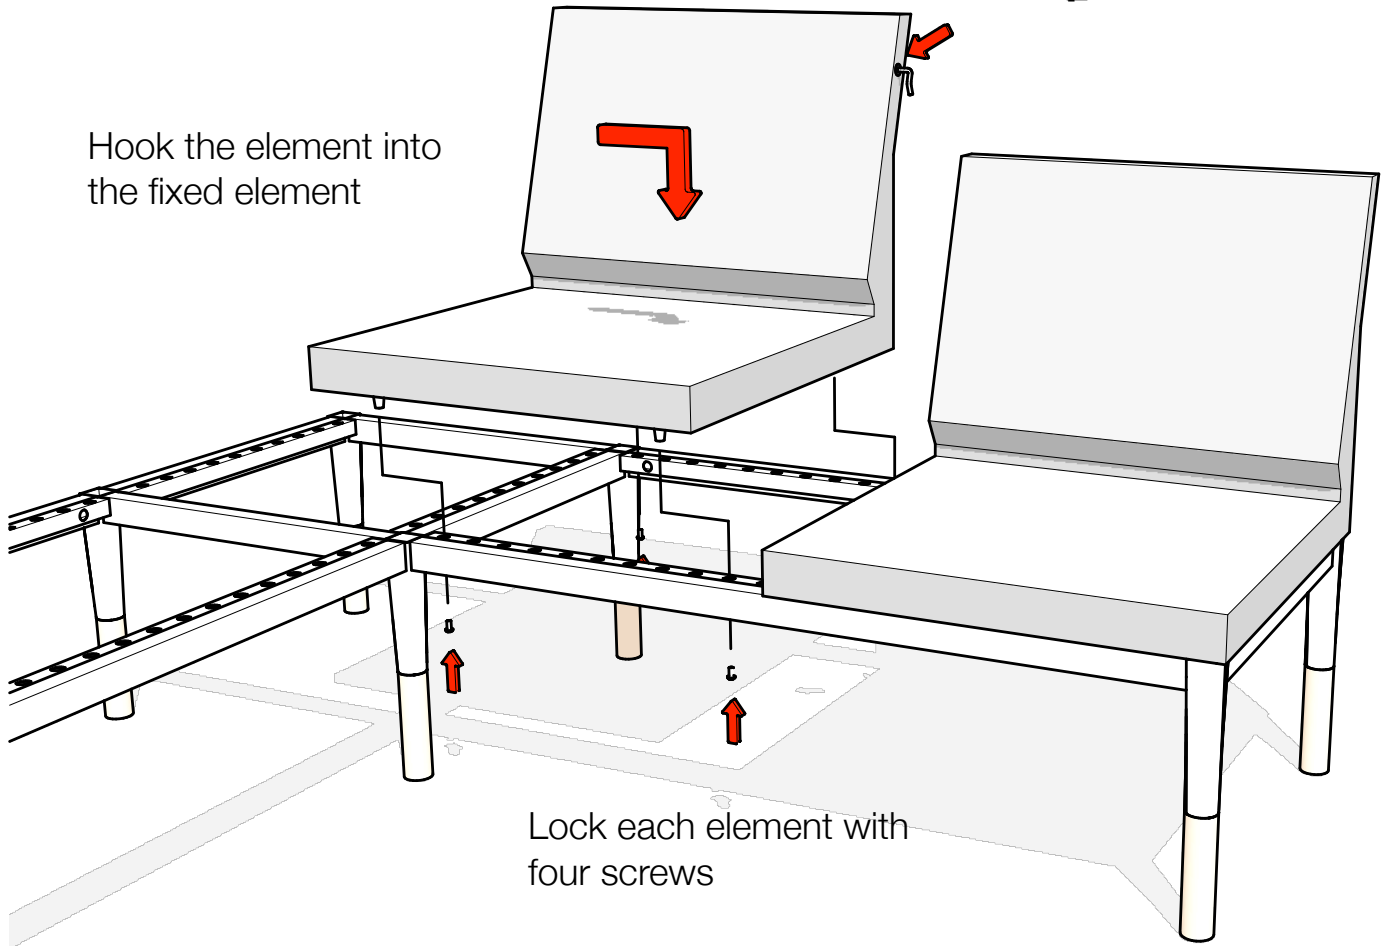


Lock each element with four screws

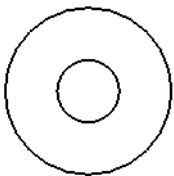

ø8 x ø22 x 1,5 mm

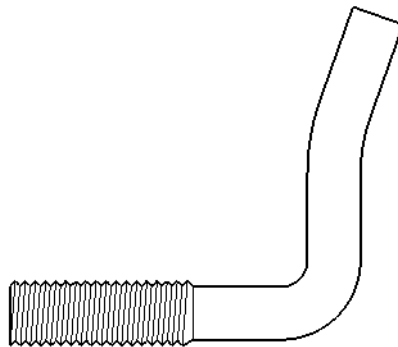


Hook M8 x 25 mm




M6 x 12 mm

4

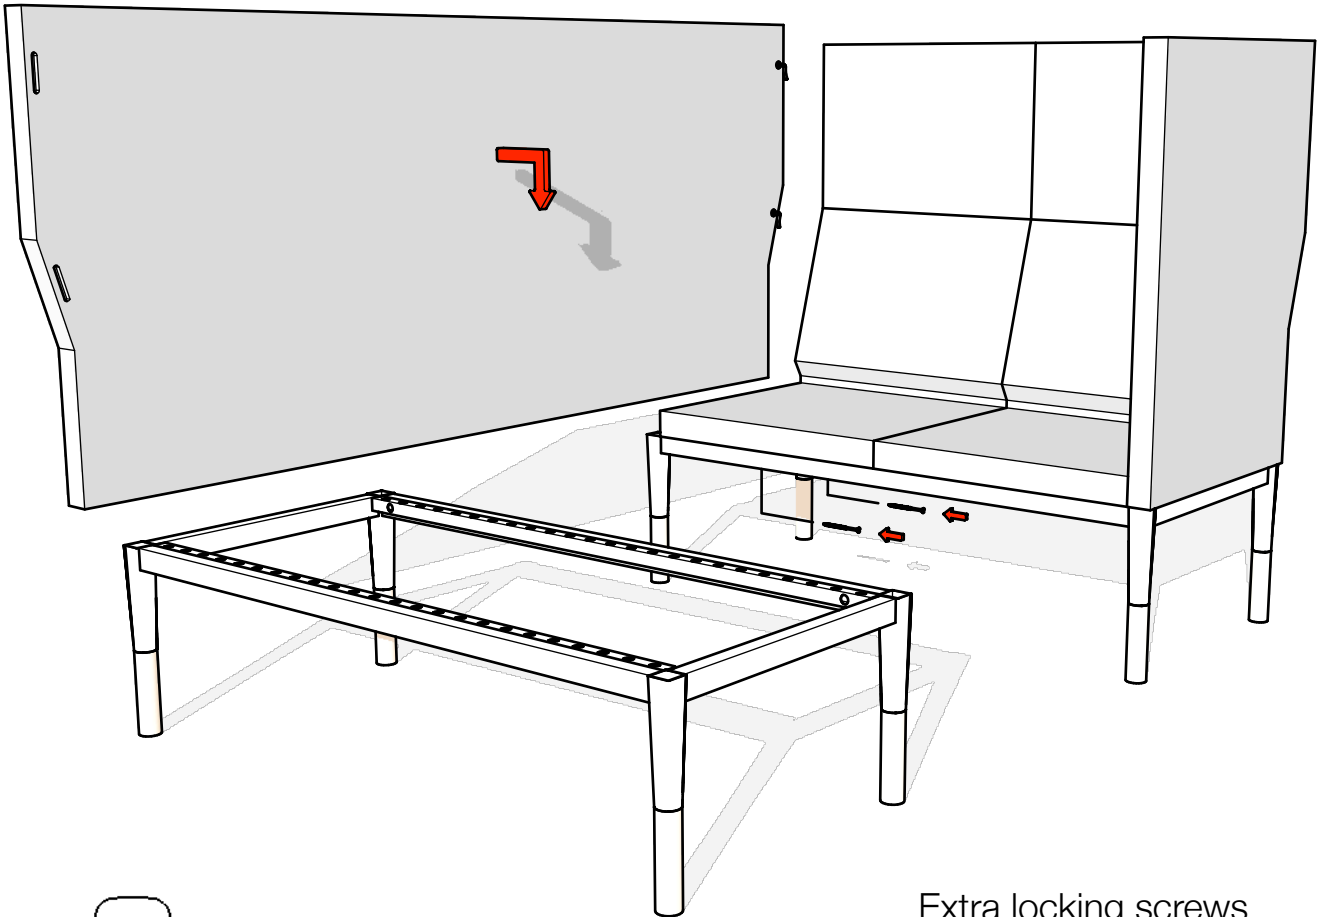


Extra locking screws  
into the wall in  
this setup




ø5 x 80 mm

5

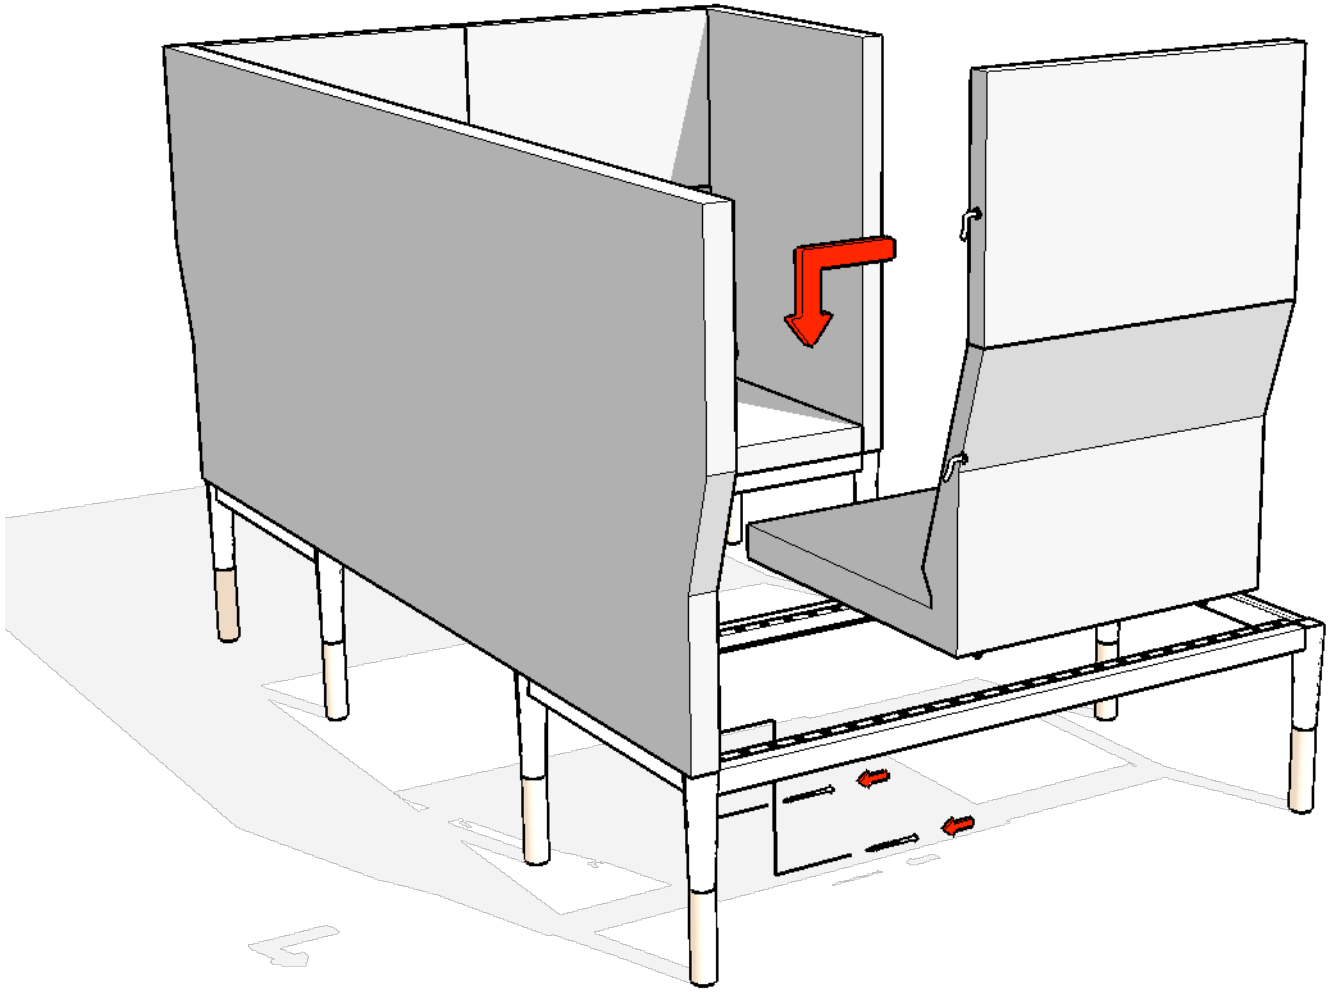


# 6



Screw supportplate to tabletop

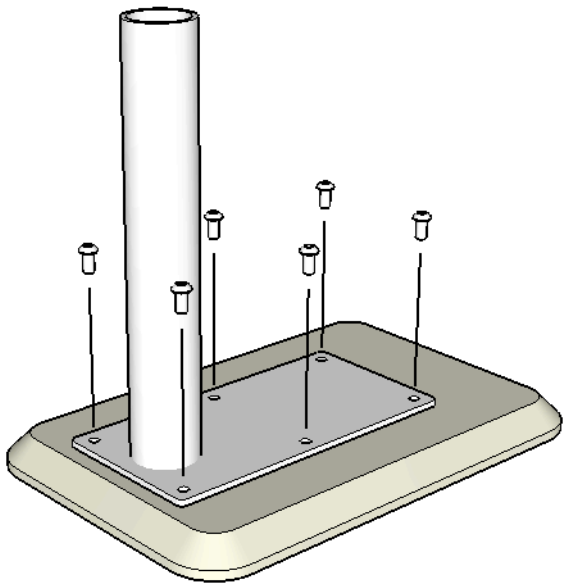

M6 x 12 mm






Fix table in armrest

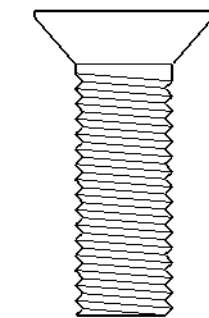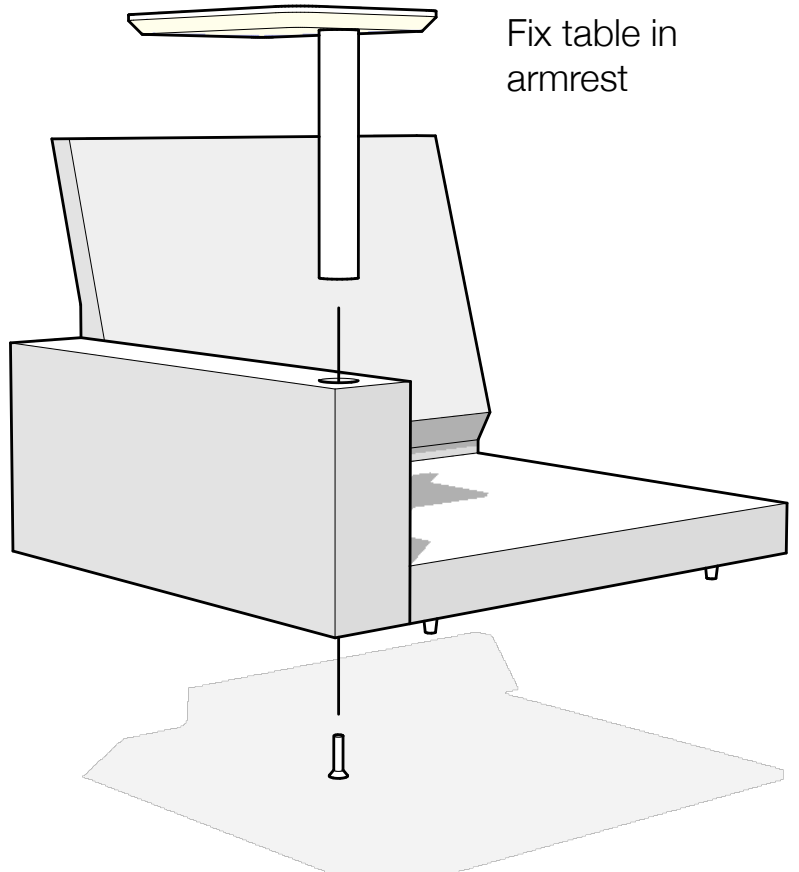

M12 x 40 mm

7

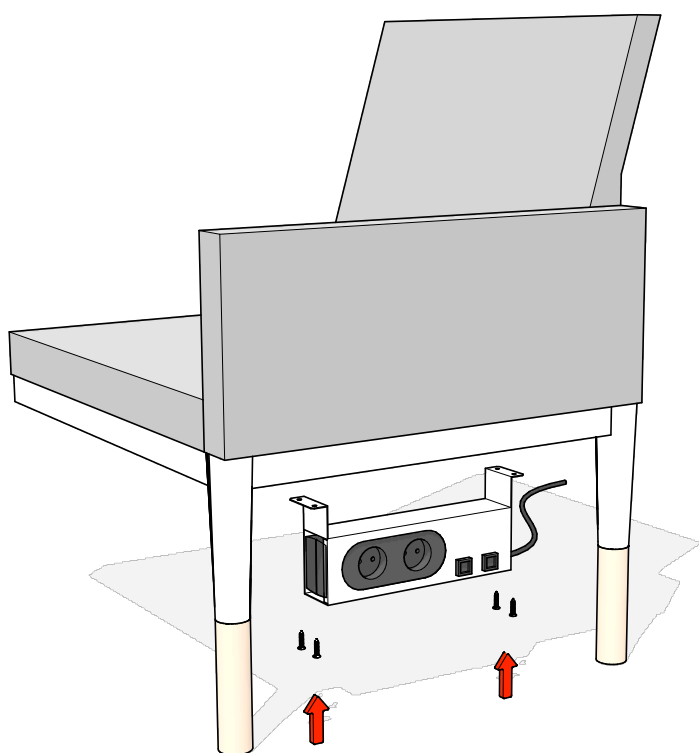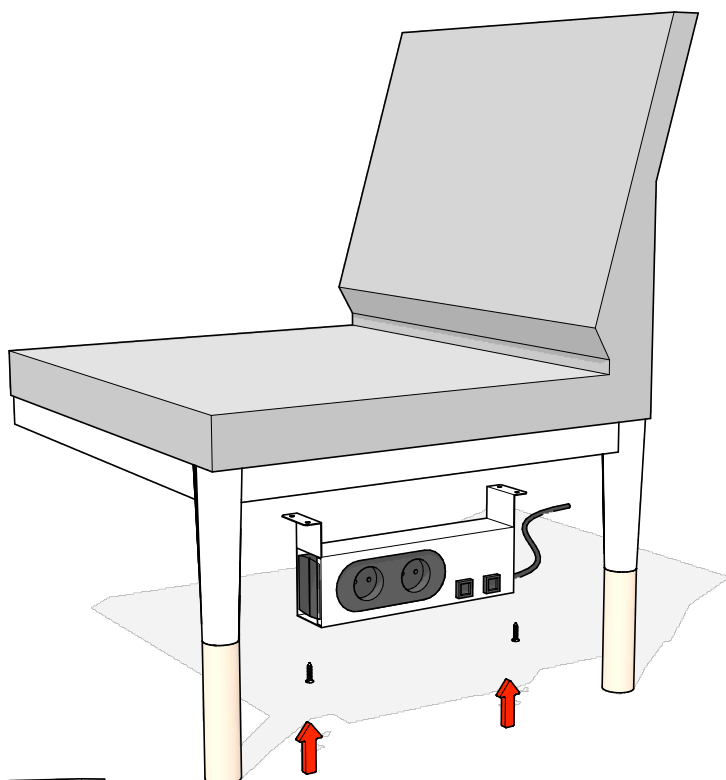

ø5 x 20 mm

For more information visit [www.johansondesign.com](http://www.johansondesign.com)



# JOHANSON

Johanson Design AB | Anders Anderssons väg 7 | 285 35 Markaryd | Sweden Tel +46 (0) 433 725 00